


# AAZ PLATFORM SLIDER SYSTEM OPERATING INSTRUCTIONS



## ⚠ WARNING

**UNSECURED SLIDER BOX can cause loss of vehicle control, which can result in property damage, serious injury or death. Use the following procedure to properly secure the slider to the trailer body rails.**

Valve stem position  
when pins are  
retracted

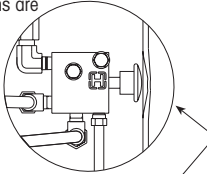

Valve stem position  
when pins are  
engaged

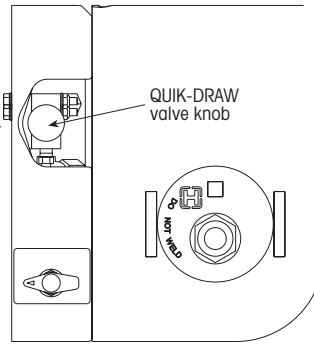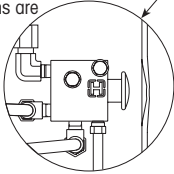

### TO REPOSITION THE SLIDER:

1. Apply the tractor and trailer brakes.
2. Retract the locking pins by pulling the QUIK-DRAW valve knob out.
3. Gently rock the trailer fore and aft to fully retract the pins.
4. Move the slider to the desired position by releasing only the tractor brakes and carefully moving the trailer until the locking pins align with the desired holes in the trailer body rails.
5. Engage the locking pins by pushing the QUIK-DRAW valve knob in.
6. Visually check all locking pins for proper engagement the chamfered ends of the locking pins must project through the body rail at all four locations.
7. Check pin engagement by gently rocking the trailer fore and aft.

Trailer Suspension Systems  
2070 Industrial Place SE  
Canton, OH 44707-2600 USA  
800.455.0043  
330.489.0045  
Fax 800.696.4416

**H HENDRICKSON**

Trailer Suspension Systems  
250 Chrysler Drive, Unit #3  
Brampton, ON L6S 6B6 Canada  
905.789.1030  
Fax 905.789.1033