

MAXILIFT® OPERATIONAL CAUTIONS

⚠ CAUTION

Before operating MAXILIFT®, check overhead clearance. As the trailer rises, the top of the trailer may hit or scrape objects above it.

Before backing up, check for uneven pavement behind the trailer. Damage may occur to the suspension beams if they hit or scrape uneven pavement.

Verify the MAXILIFT support stands are off the axle and stored before driving away from the dock area.

The MAXILIFT System requires air from the tractor for operation. **DO NOT** disconnect the supply air line from the trailer.

Trailer Suspension Systems
2070 Industrial Place SE
Canton, OH 44707-2600 USA
800.455.0043
330.489.0045
Fax 800.696.4416



Trailer Suspension Systems
250 Chrysler Drive, Unit #3
Brampton, ON L6S 6B6 Canada
905.789.1030
Fax 905.789.1033

L482 D 9-01 Printed in United States of America.

www.hendrickson-intl.com

The Boler Company
Copyright © 2001
All Rights Reserved.