



# **H** TECHNICAL PROCEDURE

**AIRTEK® / STEERTEK for  
Freightliner • Western Star  
(Sterling Vehicles built prior to 04/2009)**

SUBJECT: Service Instructions

LIT NO: 17730-243

DATE: July 2010

REVISION: D

## TABLE OF CONTENTS

<b>Section 1</b>	<b>Introduction</b> . . . . .	2	<b>Section 9</b>	<b>Component Replacement</b>	
<b>Section 2</b>	<b>Product Description</b> . . . . .	3		Fasteners . . . . .	53
<b>Section 3</b>	<b>Important Safety Notice</b> . . . . .	5		Height Control Valve . . . . .	53
<b>Section 4</b>	<b>Parts Lists</b>			Air Spring . . . . .	54
	AIRTEK			Shock Absorber . . . . .	56
	• Freightliner – built after 5/2010 . . . . .	10		Front Leaf Spring Hanger . . . . .	57
	• Western Star – built after 6/2010 . . . . .	12		Shackle Assembly (2010 Models) . . . . .	58
	• Freightliner – built prior to 5/2010, . . . . .	16		Rear Spring Hanger . . . . .	60
	Western Star – built prior to 6/2010 and			(Models built prior to 2010)	
	Sterling – built prior to 4/2009			Thrust Washer & Rear Hanger Clamp . . . . .	62
	STEERTEK w/ Mechanical Suspension . . . . .	20		(Models built prior to 2010)	
<b>Section 5</b>	<b>Special Tools</b> . . . . .	22		Leaf Spring (2010 Models) . . . . .	64
<b>Section 6</b>	<b>Towing Procedure</b> . . . . .	24		Leaf Spring (Models built prior to 2010) . . . . .	67
<b>Section 7</b>	<b>Preventive Maintenance</b>			Rear Spring Mount . . . . .	70
	Component Inspection . . . . .	27		(Models built prior to 2010)	
	Lubrication Intervals . . . . .	28		Front Leaf Spring Eye Bushing . . . . .	72
	Kingpin Lubrication . . . . .	28		(Models built prior to 2010)	
	Tie Rod End Lubrication . . . . .	29		Bottom Axle Wrap (All Models) . . . . .	73
	Tie Rod End Inspection . . . . .	30		Top Axle Wrap (All Models) . . . . .	74
	Clamp Group Re-torque Interval . . . . .	32		Front Axle Assembly . . . . .	77
	Tire Inspection . . . . .	32		STEERTEK Axle Removal . . . . .	78
	Shock Absorber Inspection . . . . .	35		STEERTEK Axle (removed from chassis) . . . . .	79
	Thrust Washer Inspection . . . . .	36		Steering Knuckle Disassembly . . . . .	82
	(Models built prior to 2010)			Kingpin Preparation & Measurement . . . . .	83
	Kingpin Bushing Inspection . . . . .	37		Kingpin Bushing Removal . . . . .	85
	Steering Knuckle Inspection . . . . .	38		Steering Knuckle Bore Measurement . . . . .	86
	Axle Wrap Liner Inspection . . . . .	38		Kingpin Bushing Installation . . . . .	86
				Kingpin Bushing Reaming . . . . .	87
				Kingpin Seal Installation . . . . .	88
				Steering Knuckle Assembly . . . . .	89
<b>Section 8</b>	<b>Alignment &amp; Adjustments</b>			Tie Rod End and Cross Tube . . . . .	91
	Alignment Definitions . . . . .	39		Dual Height Control Valve Conversion . . . . .	92
	Inspection Prior to Alignment . . . . .	42	<b>Section 10</b>	<b>Plumbing Diagrams</b> . . . . .	98
	Front Wheel Alignment . . . . .	43	<b>Section 11</b>	<b>Troubleshooting Guide</b> . . . . .	100
	Single Ride Height Verification . . . . .	44	<b>Section 12</b>	<b>Torque Specifications</b> . . . . .	104
	Dual Ride Height Verification . . . . .	46	<b>Section 13</b>	<b>Front Wheel Alignment Specifications</b> . . . . .	110
	Day Cab Ride Height Adjustment . . . . .	48	<b>Section 14</b>	<b>Important References</b> . . . . .	111
	Steering Stop . . . . .	49			
	Toe Setting . . . . .	49			
	Spring Eye Re-torque . . . . .	51			