

AUTOMATIC AIR SPRING DUMP CONTROL

CAUTION

This trailer is equipped with an air ride suspension and an automatic air spring dumping system. By setting the trailer parking brakes or disconnecting the trailer glad hands, suspension air will exhaust. The trailer may drop and move forward. The forward motion, or "trailer walk," may damage the trailer's landing gear when using the landing gear to support the trailer.

NORMAL HIGHWAY OPERATION (RELEASED PARKING BRAKES) — The trailer will operate normally at its pre-set ride height.

LOWERING OPERATION (APPLIED PARKING BRAKES) — The air from the trailer's air suspension will exhaust.

2070 Industrial Place SE
Canton, Ohio 44707-2600 USA
Phone (330) 456-7288
Fax (330) 456-0105

 **HENDRICKSON**
Trailer Suspension Systems

A Boler Company

250 Chrysler Drive, Unit #3
Brampton, Ontario L6S 6B6 CAN
Phone (905) 789-1030
Fax (905) 789-1033

L373 Rev. B August 1998 Printed in United States of America.
Supersedes all previous versions of L373.

The Boler Company. Copyright © 1998
Hendrickson Trailer Suspension Systems
All Rights Reserved