

⚠️ WARNING

DO NOT operate the vehicle without all slider pins completely through body rails.

⚠️ CAUTION


DO NOT operate the vehicle without air pressure in air springs

MANUAL PIN-PULL OPERATING INSTRUCTIONS

TO REPOSITION THE SLIDER:

1. On a level surface, **apply** trailer parking brakes.
2. **Remove** manual stop bar (if applicable) and **move** it to desired position.
3. **Retract** locking pins: **MANUAL SYSTEM:** Raise and lock the operating handle in the top position.
RAMP SYSTEM: Pull outward on the handle until the lock stop hooks over the edge of the handle guide plate.
4. Gently **rock** trailer fore and aft to fully **retract** any bound pins.
5. **Move** trailer until slider is in desired position. **Trailer parking brakes must remain applied.**
6. **Engage** locking pins: **MANUAL SYSTEM:** Lower and lock the operating handle in the bottom position.
RAMP SYSTEM: Raise handle slightly and push inward.
7. Visually **check** all locking pins for proper engagement; chamfered ends of locking pins must project through body rail at all four locations.
8. **Install** manual stop bar directly behind slider system.
9. Gently **rock** trailer fore and aft to **check** pin engagement.

For more information, please contact Hendrickson Trailer Technical Services, in the United States and Canada at 866-RIDEAIR (743-3247) or email HTTS@Hendrickson-intl.com.

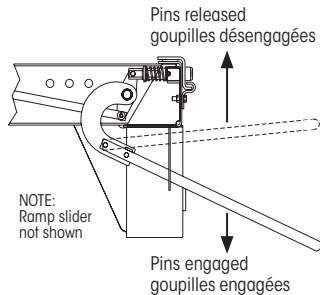

Warranty and important literature: Garantie et autres publications importantes :

L583 *Comprehensive Warranty Statement*

L583FR *Énoncé intégral de la garantie*

L1074 *Slider Suspension Information*

www.Hendrickson-intl.com/TrailerLit



⚠️ AVERTISSEMENT

NE JAMAIS opérer le véhicule sans avoir toutes les goupilles engagées correctement.

⚠️ ATTENTION

NE PAS opérer le véhicule sans air dans les ressorts pneumatiques.

Mode d'emploi pour goupilles de glissière de type manuel

Pour déplacer la glissière :

1. Sur une surface plane, **appliquer** le frein de stationnement de la remorque.
2. **Enlever** la barre d'arrêt (si présente) et la **replacer** à la position désirée.
3. **Rétracter** les goupilles : **Système manuel :** Lever et bloquer le levier à la position supérieure.
Système avec rampe : Tirer le levier vers l'extérieur jusqu'à ce que le crochet de verrouillage soit accroché sur la plaque du guide de poignée.
4. **Déplacer lentement** la remorque d'avant à arrière pour **s'assurer** que toutes les goupilles soient rétractées.
5. **Déplacer** la remorque jusqu'à ce que la glissière soit à la position désirée. **Les freins de la remorque doivent rester engagés.**
6. **Réengager** les goupilles : **Système manuel :** Abaisser et barrer le levier à la position inférieure.
Système avec rampe : Lever légèrement le levier et le **pousser** vers l'intérieur.
7. **Vérifier** visuellement que les goupilles soient engagées correctement – les extrémités chanfreinées doivent traverser les rails aux quatre emplacements.
8. **Repositionner** la barre d'arrêt derrière la glissière.
9. **Déplacer lentement** la remorque d'avant à arrière pour **s'assurer** que toutes les goupilles soient bien engagées.

Pour de plus amples informations, veuillez contacter le service technique de Hendrickson au 866-743-3247 ou par courriel HTTS@hendrickson-intl.com pour le Canada ou les États-Unis.

HENDRICKSON Trailer Commercial
Vehicle Systems

www.hendrickson-intl.com

866-RIDEAIR (743-3247)