


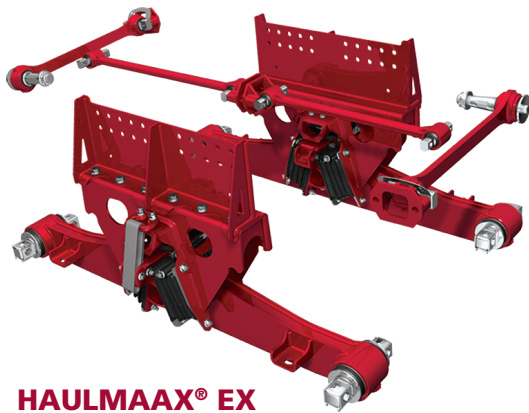

HAULMAAX® EX

Refer to the chart below for Gauge Part Numbers to order on-line: www.hendrickson-intl.com/tools/gauge-request-form

GAUGE STYLE	VEHICLE MANUFACTURER	GAUGE PART NUMBER
	Freightliner	48422-651
	International	48422-652
	Kenworth / Peterbilt	48422-654
	Mack	48422-658
	Volvo	48422-655
	Autocar	48422-650
	Western Star	48422-656
	Kenworth / Peterbilt	48422-653
	Seagrave	48422-657



Toll-free
U.S. and Canada
855.743.3733

Outside
U.S. and Canada
630.910.2800



PARTS IDENTIFICATION
truckparts@hendrickson-intl.com



TECHNICAL SUPPORT
wdtechservices@hendrickson-intl.com




Hendrickson Product Information
www.hendrickson-intl.com

HAULMAAX® EX Saddle Height Gauges

Using Saddle Height Gauges: Step-by-Step Instructions

Determine your suspension's **Saddle Height** (Steps 1 & 2) and **Capacity** (Step 3) using the specific HAULMAAX EX Saddle Height Gauge applicable to the vehicle manufacturer.

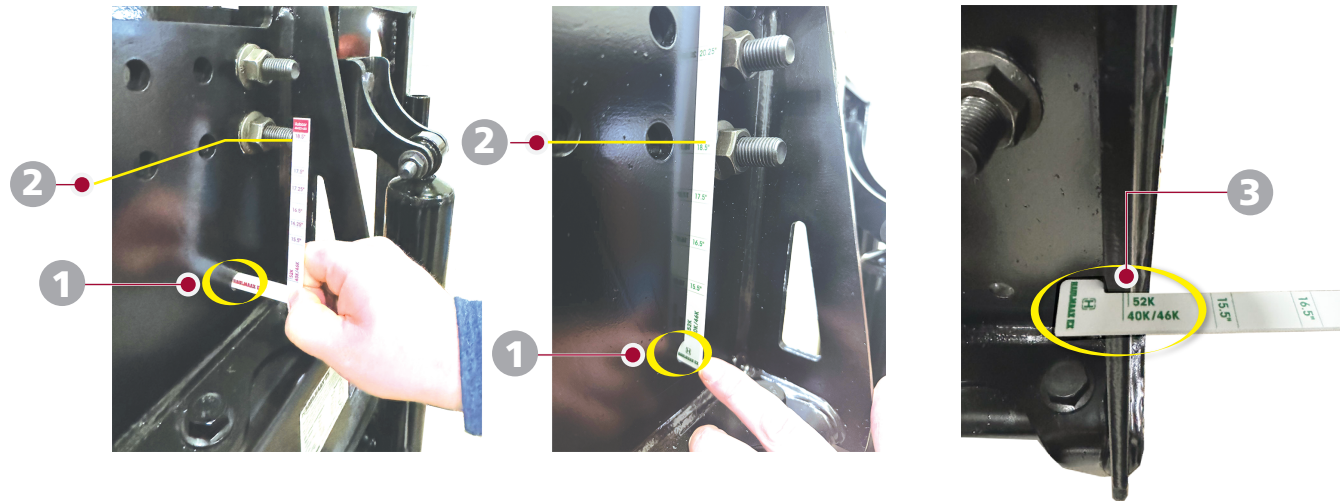

1

Locating Hole - Insert the lower extrusion of the Saddle Height Gauge into the lower locating hole of the Frame Hanger


2

Lower row of Frame Hanger Fasteners - Saddle height is determined by the point where the gauge intersects with the centerline of the lower-most fastener

3

Frame Hanger Gusset - Turn gauge horizontally and place the flat edge of the lower extrusion against the gusset to determine your suspension's capacity

HAULMAAX® EX Frame Hanger / Saddle Height Configuration

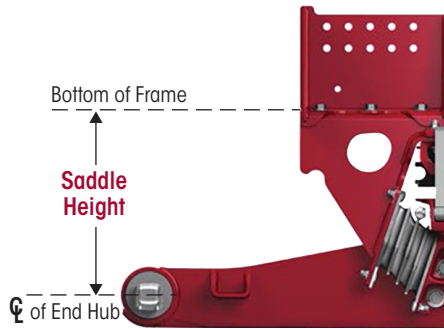

	40K		46K		52K	
VEHICLE MANUFACTURER	FRAME HANGER PART NO.	SADDLE HEIGHT	FRAME HANGER PART NO.	SADDLE HEIGHT	FRAME HANGER PART NO.	SADDLE HEIGHT
AUTOCAR	91754-220	15.5"	91754-220	15.5"	93832-040	16.5"
	91754-240	16.5"	91754-240	16.5"	93833-020	16.25"
	91754-260	17.5"	91754-260	17.5"	93833-040	17.25"
	91754-280	18.5"	91754-280	18.5"		
INTERNATIONAL	91742-010	15"	91742-010	15"	91744-060	17.5"
	91742-040	16.5"	91742-040	16.5"	91744-260	17.5"
	91744-120	20.25"	91744-120	20.25"	91744-460	17.5"
	91742-210	15"	91742-210	15"		
	91742-240	16.5"	91742-240	16.5"		
	91744-320	20.25"	91744-320	20.25"		
	91742-410	15"	91742-410	15"		
	91742-440	16.5"	91742-440	16.5"		
	91744-520	20.25"	91744-520	20.25"		
MACK	93788-101	15.1"	91746-020	15.5"	94415-040	16.5"
VOLVO			91746-040	16.5"	94415-060	17.5"
			93972-020	21.5"	91748-060	17.5"
			93892-060	17.5"		
OSHKOSH	—		93987-040	17.5"	—	
PIERCE	—		*91738-060	17.5"	—	
SEAGRAVE	91738-040	16.5"	*91740-060	17"	**91740-040	16.5"

	40K		46K		52K	
VEHICLE MANUFACTURER	FRAME HANGER PART NO.	SADDLE HEIGHT	FRAME HANGER PART NO.	SADDLE HEIGHT	FRAME HANGER PART NO.	SADDLE HEIGHT
KENWORTH PETERBILT	91738-020	15.5"	91738-020	15.5"	91740-040	16.5"
	91738-040	16.5"	91738-040	16.5"	91740-060	17.5"
	91738-060	17.5"	91738-060	17.5"	91740-080	18.5"
	91738-080	18.5"	91738-080	18.5"	91740-240	16.5"
	91740-115	20.25"	91740-115	20.25"	91740-260	17.5"
	91740-160	22.5"	91740-160	22.5"	91740-280	18.5"
	91740-220	15.5"	91740-220	15.5"	91740-315	20.25"
	91740-240	16.5"	91740-240	16.5"		
	91740-260	17.5"	91740-260	17.5"		
	91740-280	18.5"	91740-280	18.5"		
FREIGHTLINER	91816-204	15.5"	93887-205	16.5"	91818-206	17.5"
	91816-205	16.5"	93887-206	17.5"	91818-207	18.25"
	91816-206	17.5"	93887-208	18.5"	91818-306	17.5"
	93889-209	20.5"	93887-305	16.5"	91818-307	18.25"
	91816-304	15.5"	93887-306	17.5"		
	91816-305	16.5"	93887-308	18.5"		
	91816-306	17.5"				
	93889-309	20.5"				
WESTERN STAR	91750-003	15.5"	93888-003	15.5"	91752-004	16.5"
	91750-001	16.5"	93888-001	16.5"	91752-005	17.25"
	91750-002	17.5"	93888-002	17.5"	91752-002	17.5"
	91750-103	15.5"	93888-103	15.5"	91752-003	18.25"
	91750-101	16.5"	93888-101	16.5"	91752-104	16.5"
	91750-102	17.5"	93888-102	17.5"	91752-105	17.25"
					91752-102	17.5"
					91752-103	18.25"

Saddle Heights above 19.5" use 52K lb. frame hangers.

*48K lb. Capacity, **54K lb. Capacity